



# GD-V-WP -VERSA WALL POST KIT (2400mm & 3000mm)

**IMPORTANT:**

- \* As wall materials vary, screws and plugs for the walls are not included. Only use screws and plugs that are suitable for your walls and capable of holding the intended load. If you are uncertain, seek professional engineering advice.
- \* Never use damaged parts.
- \* All dimensions shown are in millimetres.
- \* All mounting heights are indicative & are measured from the finished floor level (FFL).

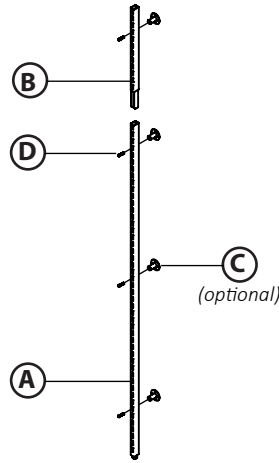

KIT CONTENTS	
A	POST
B	EXTENSION POST
C	STAND OFF (optional)
D	BOLT

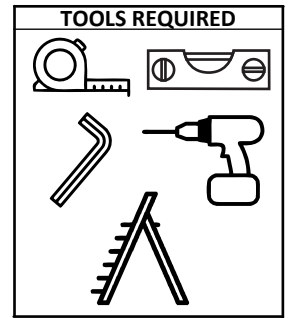

**PLEASE READ THE INFORMATION BELOW BEFORE COMMENCING ANY ASSEMBLY**

**1. POST CENTRE DISTANCES:**  
In order to suit all VERSA Accessories, the post centres should be set to either 600, 914 or 1200mm apart.

**2. EXTENSION POST ASSEMBLY**  
- for 3000mm kits only.

**3. SCREW FIXING HEIGHTS**  
- when fixed directly to the wall; without standoffs.

**4.1 (OPTIONAL) STANDOFF MOUNTING HEIGHTS**

**4.2 STANDOFF ASSEMBLY**  
- do not overtighten the bolts

**Side Section Detail**