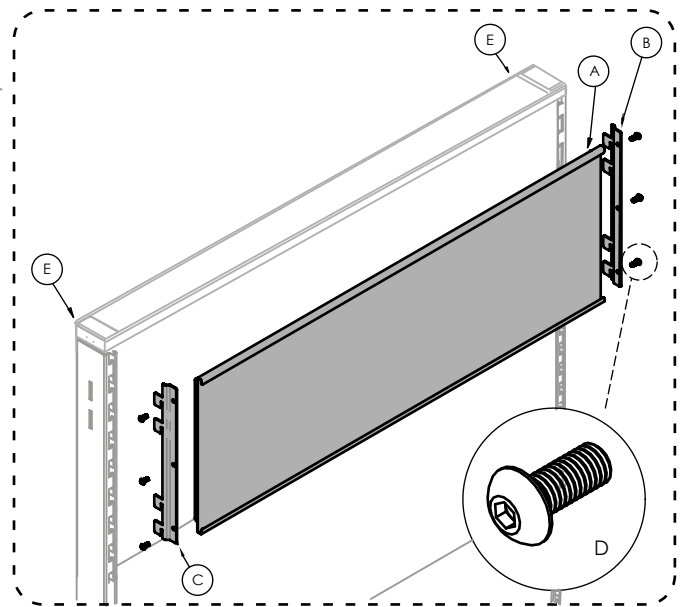# Upright
Assembly Option:

Tools Required:
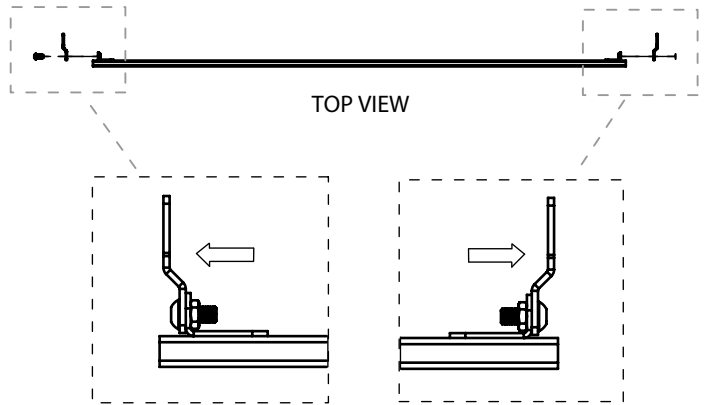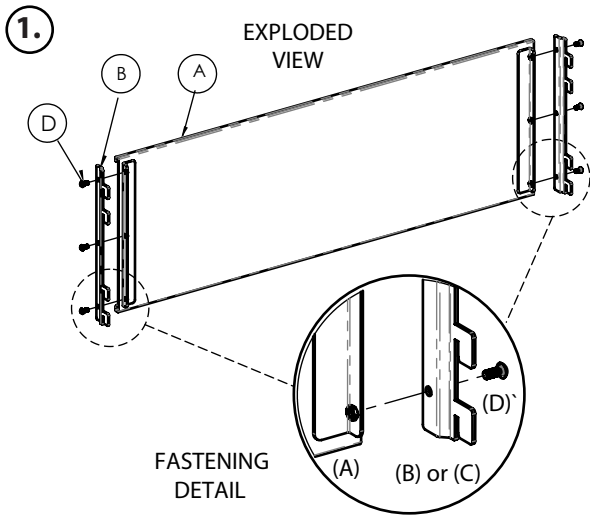
1 x M5 HEX KEY

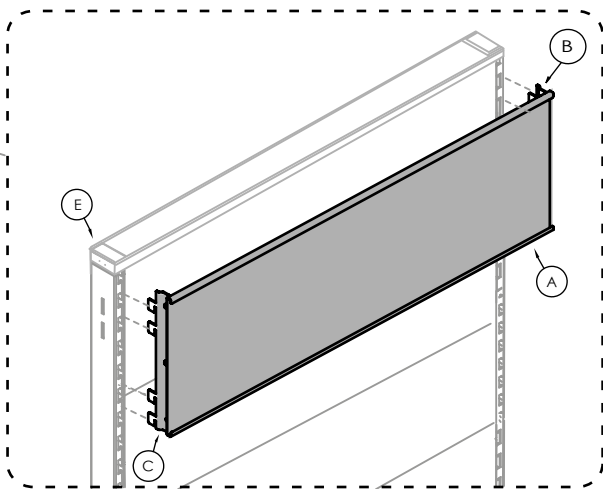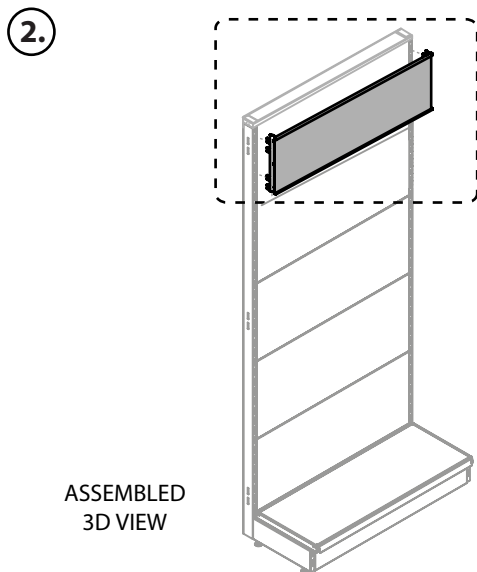| ITEM NO.	DESCRIPTION	UPRIGHT/QTY.
A	SIGN HOLDER	1
B	RIGHT BRACKET	1
C	LEFT BRACKET	1
D	M5 x 12mm BUTTON SCREW	6
E	UPRIGHT	2
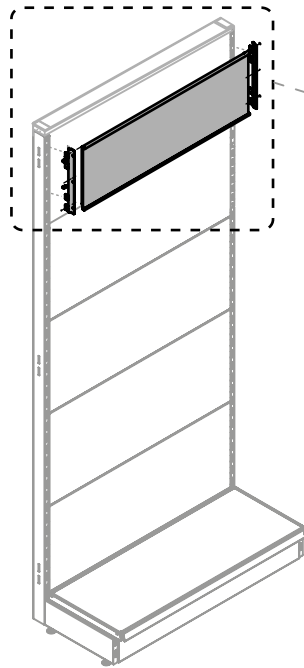
EXPLODED VIEW

PLEASE READ THE STEPS BELOW BEFORE COMMENCING ANY ASSEMBLY.

1.

EXPLODED VIEW

TOP VIEW

FASTENING DETAIL

(A)   (B) or (C)   (D)`

ENSURE **ALL** BOLTS ARE SECURELY FASTENED.

2.

ASSEMBLED 3D VIEW

CONNECT THE **(A) SIGNHOLDER** TO **(E) UPRIGHTS.**

ASSEMBLY INSTRUCTIONS

Si retail ®
SOLUTIONS IN RETAIL

CLIENT: SI RETAIL	
PROJECT: GONDOLA SIGNHOLDER UPRIGHT	
TITLE: UPRIGHT SET-UP INSTRUCTIONS	

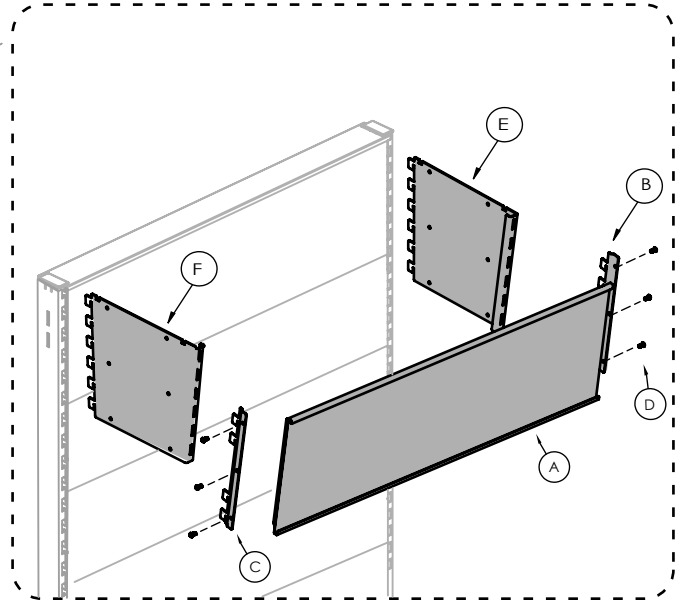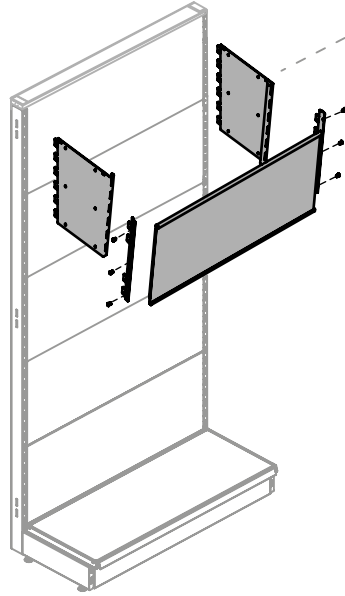|	
PRPJECT No. GD-V-XX-SH-300	**DATE:** 24/1/2023
DRAWN BY: SI RETAIL	**SHEET:** 1/2
FILE NAME: GD-V-SH-300	**REVISION:** B

Extension

Assembly Option:

Tools Required:
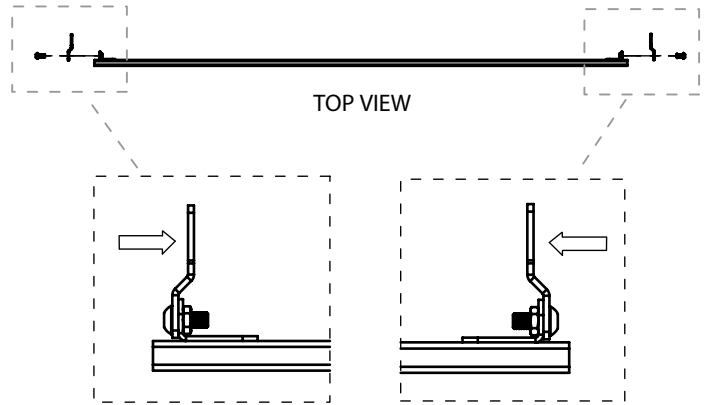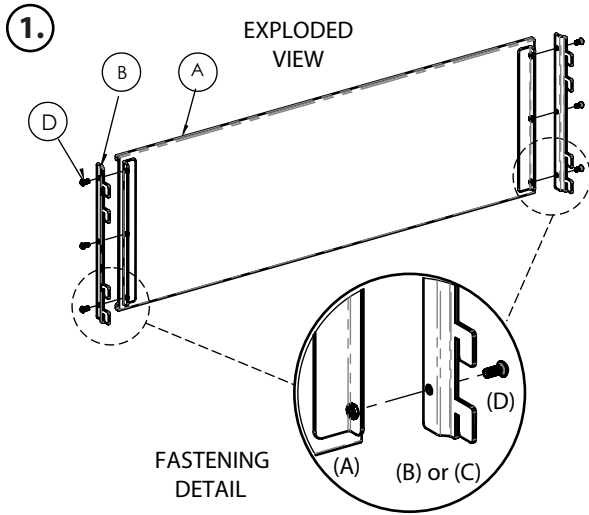
1 x M5 HEX KEY

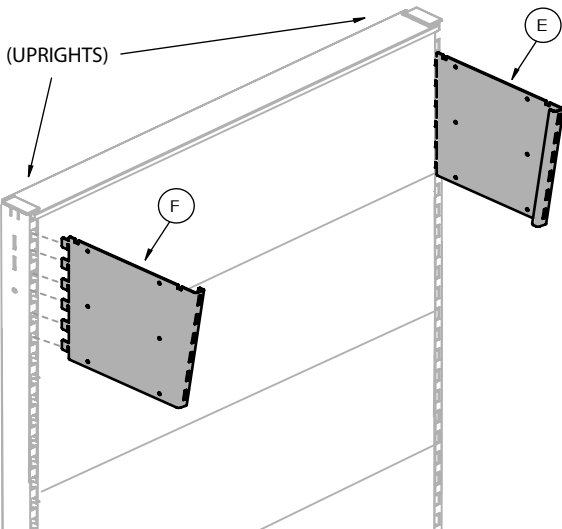| ITEM NO.	DESCRIPTION	DEF/QTY.
A	SIGNHOLDER	1
B	RIGHT BRACKET	1
C	LEFT BRACKET	1
D	M5 x 12mm SCREW	6
E	RIGHT EXT. BRACKET	2
F	LEFT EXT. BRACKET	2

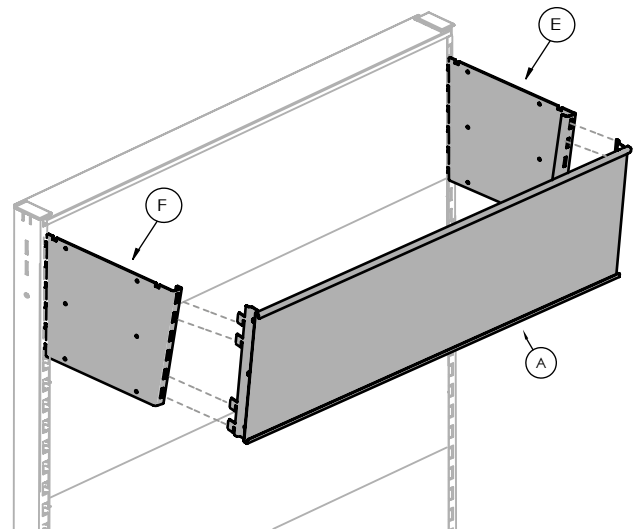## PLEASE READ THE STEPS BELOW BEFORE COMMENCING ANY ASSEMBLY.

1.

EXPLODED VIEW

TOP VIEW

FASTENING DETAIL

(A) (B) or (C) (D)

ENSURE **ALL** BOLTS ARE SECURELY FASTENED

2. CONNECT THE **(E,F) EXTENSION BRACKETS** TO THE **UPRIGHTS.**

(UPRIGHTS)

3. CONNECT **(A) SIGNHOLDER** TO **(E,F) EXTENSION BRACKETS.**